

IMPORTANT

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING

These instructions must be used as a supplement to those provided with the instructions provided with the Maxitrol Millivolt Valve Kit. **NOTE:** It is very difficult to install this kit after dry wall is up. We suggest using the MRCK after that

General Instructions

We recommend that our products be installed and serviced by professionals who are certified in the U.S. by NFI (National Fireplace Institute) or in Canada by WETT (Wood Energy Technical Training). **Installer must follow all instructions carefully to ensure proper performance and safety.**

Installer: Please leave these instructions with Consumer.
Consumer: Please retain these instructions for future use.



Instructions for MRWS Wall Switch Kit

- Step 1) Install 4 AA batteries in battery holder.
- Step 2) Install wires to switch. Using two matching female connectors follow wiring diagram on back of face plate.
- Step 3) With battery holder on top~ install switch in a wall receptacle. Secure in receptacle with 2 screws provided.
- Step 4) Run wires to valve. Connect 2 female flag type connectors to 2 male terminals on end of valve. Be sure to match sizes.

-Over-

802

IMPORTANT

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING

These instructions must be used as a supplement to those provided with the instructions provided with the Maxitrol Millivolt Valve Kit. **NOTE:** It is very difficult to install this kit after dry wall is up. We suggest using the MRCK after that

General Instructions

We recommend that our products be installed and serviced by professionals who are certified in the U.S. by NFI (National Fireplace Institute) or in Canada by WETT (Wood Energy Technical Training). **Installer must follow all instructions carefully to ensure proper performance and safety.**

Installer: Please leave these instructions with Consumer.
Consumer: Please retain these instructions for future use.



Instructions for MRWS Wall Switch Kit

- Step 1) Install 4 AA batteries in battery holder.
- Step 2) Install wires to switch. Using two matching female connectors follow wiring diagram on back of face plate.
- Step 3) With battery holder on top~ install switch in a wall receptacle. Secure in receptacle with 2 screws provided.
- Step 4) Run wires to valve. Connect 2 female flag type connectors to 2 male terminals on end of valve. Be sure to match sizes.

-Over-

802

TO OPERATE SYSTEM, BE SURE:

- A) BATTERIES ARE FRESH AND INSTALLED CORRECTLY.
- B) PILOT BURNER IS LIT.
- C) IGNITION CONTROL KNOB IS IN "ON" POSITION, THEN THE FLAME CONTROL KNOB OR MRWS WALL SWITCH WILL OPERATE SYSTEM.

IF WALL SWITCH IS INSTALLED CORRECTLY, PRESSING THE TOP OF THE ROCKER SWITCH WILL CAUSE MAIN BURNER TO GO ON. CONTINUED PRESSING WILL CAUSE FLAME HEIGHT TO INCREASE UNTILL IT REACHES MAXIMUM. FROM THERE, PRESSING BOTTOM PART OF ROCKER SWITCH WILL CAUSE FLAME HEIGHT TO DECREASE UNTIL THE MAIN BURNER TURNS OFF.

TO OPERATE SYSTEM, BE SURE:

- A) BATTERIES ARE FRESH AND INSTALLED CORRECTLY.
- B) PILOT BURNER IS LIT.
- C) IGNITION CONTROL KNOB IS IN "ON" POSITION, THEN THE FLAME CONTROL KNOB OR MRWS WALL SWITCH WILL OPERATE SYSTEM.

IF WALL SWITCH IS INSTALLED CORRECTLY, PRESSING THE TOP OF THE ROCKER SWITCH WILL CAUSE MAIN BURNER TO GO ON. CONTINUED PRESSING WILL CAUSE FLAME HEIGHT TO INCREASE UNTILL IT REACHES MAXIMUM. FROM THERE, PRESSING BOTTOM PART OF ROCKER SWITCH WILL CAUSE FLAME HEIGHT TO DECREASE UNTIL THE MAIN BURNER TURNS OFF.