

## **IMPORTANT**

**READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING**  
We highly recommend that our products be installed and serviced by professionals that have been certified by NFI (National Fireplace Institute) in the U.S. or WETT (Wood Energy Technical Training) in Canada. **INSTALLATIONS MUST BE DONE IN ACCORDANCE WITH LOCAL CODES.**



These instructions are for the **70LPK-HC** to be used with the **70PKN-HC** safety pilot kit.


These instructions must be used as a supplement to those that came with your gas log set and your safety pilot kit. Follow those instructions carefully and make the appropriate adjustments for the addition of this kit.




### 70LPK-HC Parts List

- 1) 127-130 Air mixer/Orifice


Install as directed in the 70PKN-HC kit instructions.

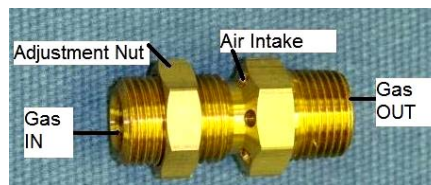

- 2) 663 Parts bag – Contains a 104P White Rodgers LP Pilot Orifice and a 218P Robertshaw LP Pilot Orifice
- 3) 125 - VE8, Vermiculite Use in place of sand.

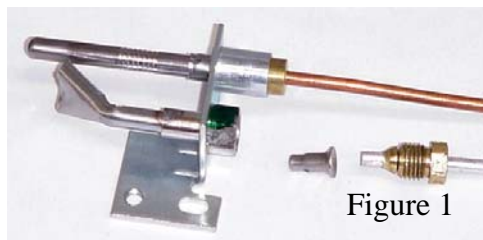

White Rodgers Pilot Assembly

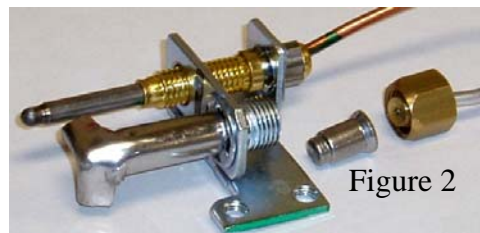

Robertshaw Pilot Assembly

- Step A) Use part 1 from this kit in place of part 4 from 70PKN-HC kit. Be sure the long end with the nut on it is pointed toward the valve and away from the burner pan. Use nut to adjust amount of air mixing with the gas. Too much air can cause sooting.
- Step B) Choose LP pilot orifice from small plastic bag to match the pilot assembly in your pilot kit. See figures 1 and 2.
- Step C) Disconnect pilot gas supply tube at bottom of pilot hood. Inside you will find a small bell shaped part. Remove it and replace it with the matching one from this kit.
- Step D) Reconnect tube to pilot hood.