

IMPORTANT

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING
We highly recommend that our products be installed and serviced by professionals that have been certified by NFI (National Fireplace Institute) in the U.S. or WETT (Wood Energy Technical Training) in Canada. INSTALLATIONS MUST BE DONE IN ACCORDANCE WITH LOCAL CODES.

These are instructions for the 70LPK, LP conversion kit designed to be used with ALL HPC safety pilot kits except the 70PKN-HC.




These instructions must be used as a supplement to those that came with your gas log set and your safety pilot kit. Follow those instructions carefully and make the appropriate adjustments for the addition of this kit.

70LPK Parts List




1) 460 air mixer/orifice. Install as directed in the pilot kit that you are converting.

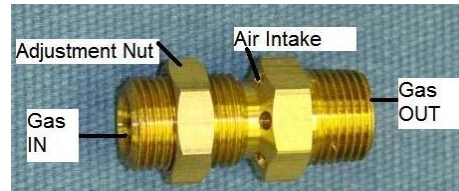


2) 663 parts bag with 104P LP Orifice for White Rodgers Pilot Assembly and 218P LP Orifice for Robertshaw pilot assembly

3) 125-VE8 vermiculite – use in place of sand

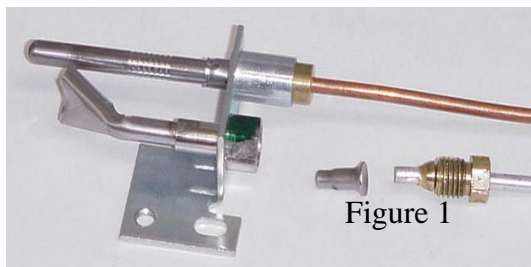

White Rodgers Pilot Assembly

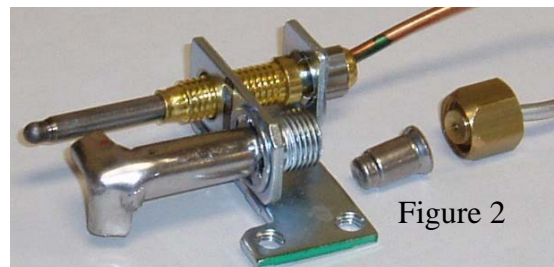

Robertshaw Pilot Assembly

- Step A) Choose LP pilot orifice from small plastic bag to match the pilot assembly in your pilot kit. See figures 1 and 2.
- Step B) Disconnect pilot gas supply tube at bottom of pilot hood. Inside you will find a small bell shaped part. Remove it and replace it with the matching one from this kit.
- Step C) Reconnect tube to pilot hood.
- Step D) Use adjustment on 460 to control air/gas mix, too much air can cause sooting.